 




ROCK WOLF 岩狼 快速指南

三模秒切：蓝牙5.0/2.4G/有线一键切换，笔记本、台式、平板、手机全掌控。

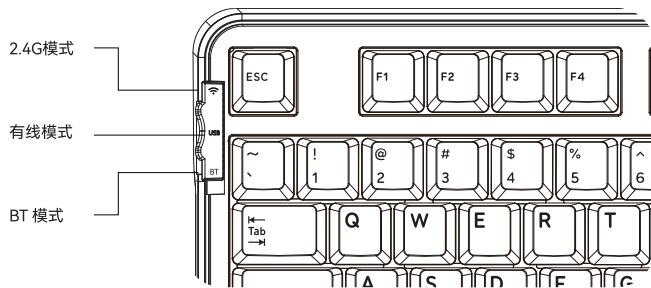

BT连接:

- 开关拨动到 “BT”
- 长按Fn+1/2/3任意一组对码,比如长按Fn+1, 此时 “1” 键快速闪烁,表示已进入配对状态, 慢闪烁表示键盘在回连状态。
- 打开电脑/手机BT, 搜索并连接设备, 搜索显示的名称: SADES RW98。

以此类推:重复以上步骤,可储存3组BT设备,1/2/3/可存储3组BT设备,在使用切换时, 短按Fn+1/2/3, 即可在不同BT设备之间切换。

有线连接: 键盘开关拨到中间档位, 插入Type-C数据线, 此时有线模式。

2.4G连接:

- 开关拨到 “2.4G”
- 长按Fn+4对码, “4” 键快速闪烁插入接收器, “4” 键停止闪烁即对码成功。

(使用提示:出厂时已配对,无需再次配对)

指示灯功能


ON	Num lock : 白灯长亮
OC	Caps Lock : 白灯长亮
OW	Win Lock: 白灯长亮
OB	充电灯: 低电红灯慢闪, 充电时红灯, 充满时熄灭



* 本产品不支持快充。

电池电量提示

 在BT、2.4G模式下,按下组合键 Fn+BackSpace 查看电池电量情况:

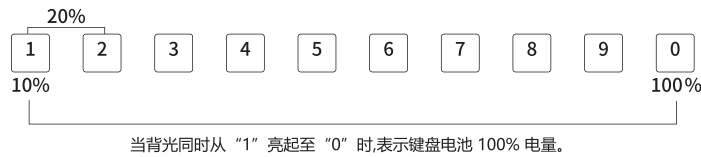

功能组合键

背光控制

Fn	↑	背光亮度 +	Enter	切换背光颜色
	↓	背光亮度 -	11	多种动态背光模式切换
	←	背光速度 -	Caps	切换发光条颜色
	→	背光速度 +	X	关闭/开启灯光

组合功能按键

Fn	+	Win	Windows Lock
			长按三秒, 恢复出厂设置
		Esc	长按五秒进入网页驱动
		Q	切换到Mac系统
		W	切换到Windows系统

WINDOWS多媒体键:

Fn	+	F1	屏幕亮度 -	F7	上一曲
		F2	屏幕亮度 +	F8	播放/暂停
		F3	锁屏	F9	下一曲
		F4	返回桌面	F10	静音
			F11	音量-	
			F12	音量+	


MAC多媒体键:

Fn	+	F1	屏幕亮度 -	F7	上一曲
		F2	屏幕亮度 +	F8	播放/暂停
		F3	锁屏	F9	下一曲
		F4	返回桌面	F10	静音
			F11	音量-	
			F12	音量+	



ROCK WOLF QUICK START GUIDE

 Triple-mode instant switch: Bluetooth 5.0/2.4G/wired one-click switching, fully control laptops, desktops, tablets and mobile phones.

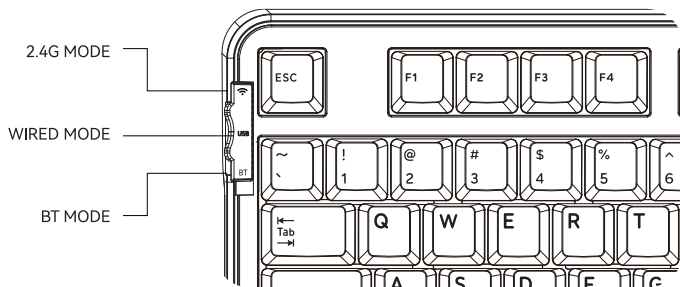

BT MODE:

- Switch toggles to “BT” .
- Long press any set of Fn+1/2/3 pair codes,Forexample,Long press Fn+1 together and the “1” key will blink quickly,indicating pairing.If the “1” key blinksslowly,indicating linking.
- Turn on your device's BT,search for this keyboard and connect,search for the name displayed:SADES RW98.

Similarly, follow the steps above to store 3 groups of different BT devices, and press Fn+1/2/3 shortly to switch between devices.

WIRED MODE: Switch toggled to center position, Use the USB Type-C cable of this product to connect to the keyboard Type-C port to use the wired mode.

2.4G MOED:

- Switch to “2.4G” .
- Long press Fn+4 to pair. The “4” key will flash rapidly when inserting the receiver. Pairing is successful when the “4” key stops flashing.

(Friendly reminder: Paired at the factory, no need to pair again)


INDICATOR LIGHTS

ON	Num lock : White light steady on
OC	Caps Lock : White light steady on
OW	Win Lock: White light steady on
OB	Charging: Slow flashing red light for low power; steady red light while charging; light off when fully charged.

* This product does not support fast charging.

BATTERY LEVEL INDICATION

 In BT and 2.4G mode, Press the Fn+BackSpace key combination to check the battery level.

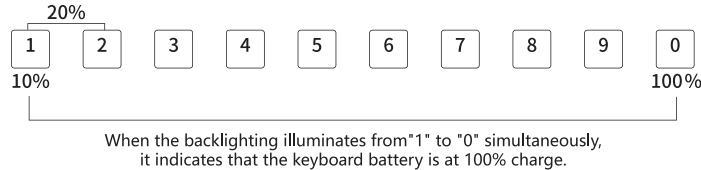

FUNCTION COMBINATION KEYS

BACKLIGHT CONTROL

Fn	↑	Backlight Brightness +	Enter	Switch backlight color
	↓	Backlight Brightness -	11	Backlight Mode Switching
	←	Backlight Speed -	Caps	Switch light bar color
	→	Backlight Speed +	X	Turn off/on Lighting

SECONDARY COMBINATION FUNCTION KEYS

Fn	+	Win	Windows Lock
			Press and hold for three seconds to restore factory settings
		Esc	Press and hold for 5 seconds to enter the web driver page
		Q	Switch to Mac system
		W	Switch to Windows system

Windows system

Fn	+	F1	Screen Brightness -	F7	Last song
		F2	Screen Brightness +	F8	Play/pause
		F3	Lock screen	F9	Next song
		F4	Go to desktop	F10	Mute
			F11	Volume-	
			F12	Volume+	

Mac system

Fn	+	F1	Screen Brightness -	F7	Last song
		F2	Screen Brightness +	F8	Play/pause
		F3	Lock screen	F9	Next song
		F4	Go to desktop	F10	Mute
			F11	Volume-	
			F12	Volume+	